

# Set-up Guide

## Snom 760 Handset for MyCloud Lync and Unfied Comms

---

### 1. Initial Phone Config

#### 1.1. Assemble the Phone



- 1.2. Turn on the phone
- 1.3. Connect it to the network.
- 1.4. Allow phone to request IP from DHCP, and watch for the IP it picks up (displayed on screen during bootup). Note down the IP address, as it will be required later.
- 1.5. Progress through time zone, language setup etc.

### 2. Browser Config

- 2.1. Open up browser and browse to the IP that the phone picked up during boot time (if missed, it is present in the **Settings > Maintenance > System Info** screen).



← → [http://10.90.114/index.htm](#)

### Welcome to Your Phone!

VERSION 8

**Operation**  
Home  
Directory

**Setup**  
Preferences  
Speed Dial  
Function Keys  
Advanced  
Certificates

**Status**  
System Information  
Log  
SIP Trace  
DNS Cache  
Subscriptions  
PCAP Trace  
Memory

**Manual**

Did you update your phone already?  
Stay up-to-date! The latest versions of snom firmware is now available for all snom devices - click on the link below for the official 8.7.3.19 update:  
[Click here and choose your phone model](#)

**Apply setting changes? Reboot**  
This web interface makes it easy for you to set your phone up correctly and to access the advanced features.  
To dial a number, just enter the number in the field below. You can enter a simple telephone number (e.g. 0114930398330) or URI like info@snom.com.

**Dial a Number:**  Dial Hangup

**Outgoing Identity:**  
 Set

[Diald](#) [Missed](#) [Received](#)

**Dialed Numbers**

Date	Time	Duration	Costs	Local Identity	Number
------	------	----------	-------	----------------	--------

**Missed Calls**

Date	Time	Missed	Local Identity	Number
------	------	--------	----------------	--------

**Received Calls**

Date	Time	Duration	Costs	Local Identity	Number
------	------	----------	-------	----------------	--------


**snom**  
VoIP phones  
© 2000-2011 snom AG

### 3. Firmware Update

#### 3.1. Select the URL for your phone

- Snom 710: <http://downloads.snom.com/snomuc/snom710-UC-8.8.2.16-SIP-r.bin>
- Snom 720: <http://downloads.snom.com/snomuc/snom720-UC-8.8.2.16-SIP-r.bin>
- Snom 760: <http://downloads.snom.com/snomuc/snom760-UC-8.8.2.16-SIP-r.bin>

#### 3.2. In the phone WebUI, click on Setup > Software Update

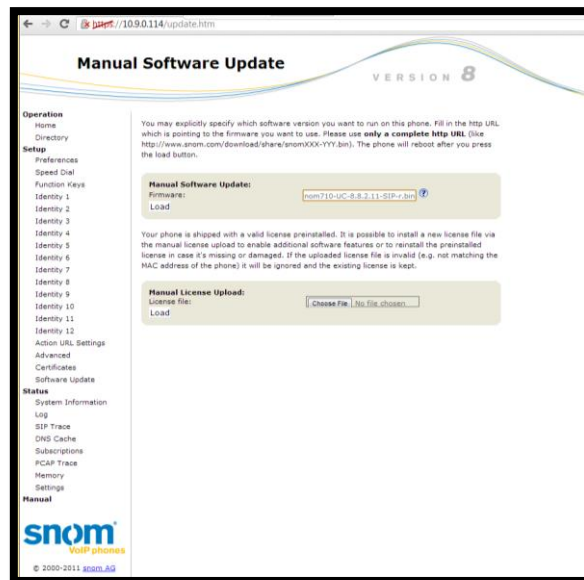

#### 3.3. Paste the appropriate link shown into the **Firmware:** box and then click **Load**.

#### 3.4. The phone will reboot.

## 4. Configure the User Account on the Phone

The screenshot shows the 'UC Account Data' configuration page for 'Identity 1'. The left sidebar has 'UC Account Data' circled in red. The main area is titled 'Please enter your account data here for identity 1' and contains three input fields: 'SIP-URI' with the value 'dominic.demo@ecsdemo.co.uk', 'Username (DOMAIN\USERNAME)' with the value 'ECLLOUDSERV\dominic.demo\_e', and 'Password' with masked characters. An 'Apply' button is at the bottom.

- 4.1. Enter **SIP-URI** in the form of your SIP account, e.g. *dominic.demo@ecsdemo.co.uk*
- 4.2. Enter **Username** in the form of your DOMAIN\Username\_CustomerShortCode, e.g. ECLLOUDSERV\dominic.demo\_ed
- 4.3. Note, once you press **Apply** you will be prompted for a Username/Password by the browser – the username/password, which was previously blank, is now the same as the **Username/Password** you just entered, **INCLUDING** the domain e.g. ECLLOUDSERV\Dominic.Demo\_ED and PASSWORD.
- 4.4. Now click on **Identity 1**  
You will see the form below.

The screenshot shows the 'Login Information' configuration page for 'Identity 1'. The page has tabs for 'Login', 'SIP', 'NAT', and 'RTP'. The 'Login' tab is active. The page contains various settings: 'Identity active' (radio buttons for 'on' and 'off'), 'Displayname' (text box: 'Dominic Demo'), 'Account' (text box: 'dominic.demo'), 'Password' (masked), 'Registrar' (text box: 'ecsdemo.co.uk'), 'Outbound Proxy' (text box: 'sip.ecloudserv.net:443;transpc'), 'Failover Identity' (dropdown: 'None'), 'Authentication Username' (text box: 'ECLLOUDSERV\dominic.demo\_e'), 'Mailbox' (text box: 'sip:dominic.demo@ecsdemo.co'), 'Ringtone' (dropdown: 'Ringer 1'), 'Ringtone for Private Line' (dropdown: 'Ringer 2'), 'Ringtone for Forwarded Calls' (dropdown: 'Ringer 3'), 'Custom Melody URL', 'Display text for idle screen', 'XML Idle Screen URL', 'Ring After Delay (sec)', 'Record Missed Calls', 'Record Dialed Calls', 'Record Received Calls', and 'Identity is hidden'. At the bottom, there are buttons for 'Apply', 'Re-Register', 'Play Ringer', 'Remove Identity', and 'Remove All Identities'.

- 4.5. Enter your friendly **Display Name**, e.g. Dominic Demo.
- 4.6. In **Outbound Proxy** you **MUST** enter the following, exactly, including comma, semicolon etc  
**sip.ecloudserv.net:443;transport=tls**
- 4.7. Press **Apply** then **Re-Register**.
- 4.8. Your phone should now be connected, providing you entered all the details correctly.
- 4.9. Note, don't forget to press **SAVE** which will be at the top of the page.